

Quick Check List

Quick Check Preventative Maintenance Procedures for Kalmar Terminal Tractors

| | Interval Hours | | | | | | | | | | |
|---|----------------|----|---------------------|-----|-----|-----|------|------|--------|------|------|
| | Daily | 50 | 200 | 250 | 500 | 750 | 1000 | 1250 | 1500 | 1750 | 2000 |
| Check All Fluid Levels | X | | | | | | | | | | |
| Change Engine Oil** | | | | | X | | X | | X | | X |
| Change Engine Oil Filter ** | | | | | X | | X | | X | | X |
| Change Transmission Oil** (Dextron-500 hrs., Synthetic Oil-3000 hrs.) | | | | | X | | X | | X | | X |
| Change Transmission Filter** (external) | | | Main Filter only | | | | X | | | | X |
| Change Transmission Filter (internal)** | At Overhaul | | | | | | | | | | |
| Change Hydraulic Oil | Annually | | | | | | | | | | |
| Change Hydraulic Filter (external) | | | | | X | | X | | X | | X |
| Change Fuel Filter(s)* | | | | | X | | X | | X | | X |
| Change Air Cleaner* | As Needed | | | | | | | | | | |
| Change Coolant | | | | | | | | | | | X |
| Change Differential Oil SISU (300 hrs.initial) Arvin Meritor, Dana Spicer | Annually | | | | | | | | X X | | |
| Lubricate Chassis | | | | X | X | X | X | X | X | X | X |
| Lubricate 5 th Wheel Boom & Cylinders | | | | X | X | X | X | X | X | X | X |
| Lubricate Latches & Hinges | | | | X | X | X | X | X | X | X | X |
| Repack Front Wheel Bearings (If applicable) | | | | | | | X | | | | X |
| Inspect/Clean Battery & Terminal Ends | | X | | X | X | X | X | X | X | X | X |
| Inspect All Belts & Pulleys | X | X | | X | X | X | X | X | X | X | X |
| Inspect Radiator & Hoses | X | X | | X | X | X | X | X | X | X | X |

Quick Check List

Quick Check Preventative Maintenance Procedures for Kalmar Terminal Tractors

| | Interval Hours | | | | | | | | | | | |
|--|----------------|----|-----|-----|-----|-----|------|------|------|------|------|---|
| | Daily | 50 | 200 | 250 | 500 | 750 | 1000 | 1250 | 1500 | 1750 | 2000 | |
| Inspect All Controls | X | X | | X | X | X | X | X | X | X | X | X |
| Inspect All Lights | X | X | | X | X | X | X | X | X | X | X | X |
| Inspect & Adjust Brakes if manual | | | | X | X | X | X | X | X | X | X | X |
| Inspect Steering Components*** | | | | X | X | X | X | X | X | | | |
| Inspect Pneumatic Systems | | | | X | X | X | X | X | X | | | |
| Drain Air Tanks | X | X | | X | X | X | X | X | X | X | X | X |
| Inspect Hydraulic System | X | X | | X | X | X | X | X | X | X | X | X |
| Inspect Fifth Wheel & Boom | X | X | | X | X | X | X | X | X | X | X | X |
| Inspect Fifth Wheel Jaws | X | X | | X | X | X | X | X | X | X | X | X |
| Inspect Tires | X | X | | X | X | X | X | X | X | X | X | X |
| Check Engine RPM's | | X | | X | X | X | X | X | X | X | X | X |
| Retorque Front and Rear Suspension Bolts | | | | | | | X | | X | | | X |
| Retorque Powertrain Mounting Bolts | | | | | | | X | | | | | X |

* See Operators/Maintenance Manual For Further Information

** See Component Manufacturer's Recommended Intervals

*** Lubricate Steering and Suspension Components Approximately Every 250 Hours

REFER TO SERVICE MANUAL FOR ADDITIONAL DETAILS

